



NX3000.2 *Two Channel*
NX2000.2 *MOSFET Car Audio*
NX1600.2 *Amplifiers*

NX3000.4 *Four Channel*
NX2500.4 *MOSFET Car Audio*
NX2000.4 *Amplifiers*

NX2800.1 *MonoBlock*
NX1800.1 *MOSFET Car Audio*
Amplifier

Congratulations on your purchase of a BOSS ONYX Amplifier.

It has been designed, engineered and manufactured to bring you the highest level of performance and quality, and will afford you years of listening pleasure.

Thank you for making **BOSS** your choice for car audio entertainment!

USER'S MANUAL

page	CONTENTS
2	Introduction
2	What is included?
3	Features
3	About 2 Ohm operation
4	General precautions
4	Installation precautions
4	Mounting the amplifier
5	Connecting the amplifier
6	Low level input wiring
9	High level input wiring
11	MonoBlock Power and Speaker wiring
12	2CH Power and Speaker wiring <i>2CH Mode</i>
13	2CH Power and Speaker wiring <i>Bridged Mode</i>
14	2CH Power and Speaker wiring <i>TriMode</i>
15	4CH Power and Speaker wiring <i>4CH Mode</i>
16	4CH Power and Speaker wiring <i>Bridged Mode</i>
17	4CH Power and Speaker wiring <i>TriMode</i>
18	Troubleshooting
19	Specifications

Introduction

With the **BOSS** AUDIO SYSTEMS ONYX MOSFET amplifier series, we are introducing twelve new amplifiers, all designed in the USA. This new series includes a two monoblock amps, three 2-channel, and three 4-channel amplifiers.

All ONYX models feature variable low pass crossovers and variable input gain controls. The two and four-channel models also have high pass crossovers.

For further flexibility in the use of a subwoofer, a 0/+9dB/+18dB Bass Boost selector has been included on all amplifiers. You can control the subwoofer level with the remote level control module.

For flexibility in use in a variety of installations, the two- and four-channel models feature both line level (RCA) and high level (speaker output) inputs, and the monoblock models integrate a line out for system building.

BOSS AUDIO SYSTEMS understands that amplifiers are placed in many different kinds of installations, so we incorporated a very flexible system of controls in these amplifiers in order to help you integrate the amp into your system regardless of the nature of your input source.

What is included?

When first unpacking your new amplifier, please check first that the package contains all of the items below. If something is missing, contact the store where you purchased the amplifier.

- **ONYX amplifier**
- **High input cable with connector (2- and 4-channel models only)**
- **Remote subwoofer level control**
- **Four (4) mounting screws**

Features

Your new ONYX amplifier features the following:

- **Class A-B operation**
- **Bridgeable outputs**
(except NX2800.1 and NX1800.1)
- **Tri-Mode capable**
(except NX2800.1 and NX1800.1)
- **MOSFET PWM (Pulse Width Modulated) Power Supply**
- **2 Ohm stable stereo operation with output power increase**
(except NX2800.1 and NX1800.1, which are 2 ohm mono stable)
- **Thermal and speaker short protection**
- **Soft turn-on circuit**
- **Remote turn-on/turn-off circuit**
- **Variable input gain control(s)**
- **Variable low pass crossover(s)**
- **Variable high pass crossover(s)**
(except NX2800.1 and NX1800.1)
- **Variable 0 to +18dB Bass Boost**
- **Chrome-plated RCA low level and high level inputs**
- **LED power and protection indicators**
- **Gunmetal aluminum heatsink**
- **Remote subwoofer level control**

About 2 Ohm operation

Your ONYX amplifier has been designed to operate efficiently at loads down to 2 Ohms. This means that you can install four 8 Ohm speakers per channel, *when using parallel wiring.*

Increasing the number of woofers per channel at low frequencies (below 100Hz) produces an acoustic coupling effect. This acoustic coupling effect increases your power output by about 3dB per speaker, or the equivalent of an additional 10W per speaker.

When operating at 2 Ohms, the amplifiers will increase their output power by approximately 50%. *The current draw will also increase by about the same amount, so be sure you have enough current to run the amplifiers into a 2 Ohm load.*

If you lack adequate current, your music reproduction will be distorted.

General precautions

*Before installing and using your new **BOSS** amplifier, please become familiar with all the information contained in this manual. Please keep this manual in a safe place for future reference.*

- Do not open or attempt to repair this unit yourself. Dangerous high voltages are present which may result in electric shock. Refer any repairs to a qualified service technician.
- To avoid risk of electronic shock or damage to the amplifier, do not permit any of this equipment to become damp or wet from water or drinks. If this does occur, immediately unplug the power wires and send the amplifier to your local dealer or service center as soon as possible.
- If there is smoke or any peculiar odor present during use or if there is damage to any of the component enclosures, immediately unplug the power wire and send the amplifier to your local dealer or service center as soon as possible .

Installation precautions

Before you drill or cut any holes, investigate your car's layout very carefully. Take special care when you work near the gas tank, fuel lines, hydraulic lines and electrical wiring.

Never operate the amplifier when it is unmounted. Attach all audio system components securely to prevent damage, especially in an accident.

Before making or breaking power connections in your system, disconnect the vehicle battery. Confirm that your head unit or other equipment is turned off while connecting the input jacks and speaker terminals.

If you need to replace the power fuse, replace it only with a fuse identical to that supplied with the amplifier. Using a fuse of a different type or rating may result in damage to your audio system or your amplifier which is not covered by the manufacturer's warranty.

Mounting the amplifier

1. Find a suitable location in the vehicle in which to mount the amplifier.
2. Make sure there is sufficient air circulation around the intended mounting location.
3. Mark the location for the mounting hole screws by positioning the amplifier where you wish to install it. Use a scribe or mounting screw, inserted through each of the amp's mounting holes, to mark the mounting surface. If the mounting surface is carpeted, measure the hole centers and mark with a felt tip pen.
4. Drill pilot holes in the mounting surface for the mounting screws. Place the amplifier in position, and attach the amplifier to the mounting surface securely using screws.

SHOCK HAZARD! Do not open the case of this product. There are dangerous voltages present within the unit. There are no user-serviceable parts within the unit.

Connecting the amplifier

Before doing any wiring, look through this manual and identify the diagrams to follow for power, input and speaker connections for your particular installation. Be sure you understand all the connections before you proceed.

1. Connect the power ground terminal to the closest point on the chassis of the car. Keep this ground wire to less than 39" (100 cm) in length. Use 8 gauge (or heavier) wire.

2. Connect the remote terminal to the remote output of the head unit using 16 gauge (or heavier) wire.

3. Connect an empty fuse holder within 18" (45 cm) of the car battery, and run 8 gauge (or heavier) cable from this fuse to the amplifier location.

4. Check that the fuse holder is empty. Then connect the fuse holder to the "BATT+" connection on the amplifier.

5. If multiple amplifiers are being used in your system, either:

- Run a separate pair of cables from the battery and a chassis ground point to each amplifier. Each (+) cable must have its own inline fuse.

-or-

- Run a #4 cable from the fuse holder at the battery to a distribution block at or near the amplifier's location. Then run separate cables from the amplifier to this distribution block and to independent chassis ground points.

6. Connect all line inputs and outputs (if used) using high-quality cables. Connect all speakers, following the diagrams in this manual. Be sure to observe proper polarity to avoid audio phase problems.

7. Insert fuse(s) into the battery fuse holder(s).

8. Recheck all connections before powering up the amplifier.

9. Set all level controls to minimum position, and set all crossover controls/switches to the desired frequency points.

10. Power up the head unit and the amplifier. Then set the volume control on the head unit to about 3/4 volume, and adjust the amplifier's input level control(s) to just below the level of distortion.

11. Further fine tuning of the various controls may be necessary to obtain best results.

Don't misuse the level control!

Do not mistake the input level control for a volume control! It is designed ONLY to match the output level of your audio source to the input level of your amplifier.

Do not adjust this input level to maximum unless your input level requires it.

Ignoring these instructions will result in an input overload to the amplifier, and excessive audio distortion. It can also cause the protection circuit to engage.


Low Level Input Wiring

Low-level (RCA) input wiring is preferred for best audio performance. Always use a high-quality RCA cable for best audio performance.

NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

MonoBlock Amplifiers

NX1800.1
NX2800.1

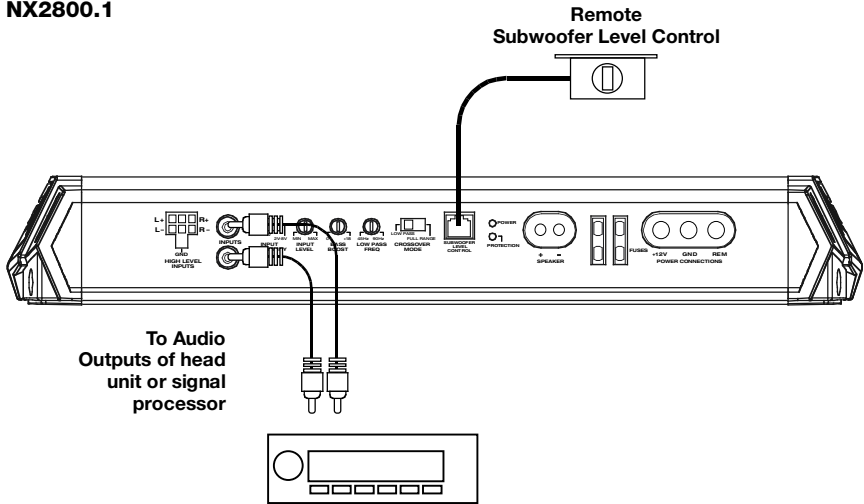

Low Level Input Wiring


NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

2-Channel Amplifiers

NX3000.2

NX2000.2

NX1600.2

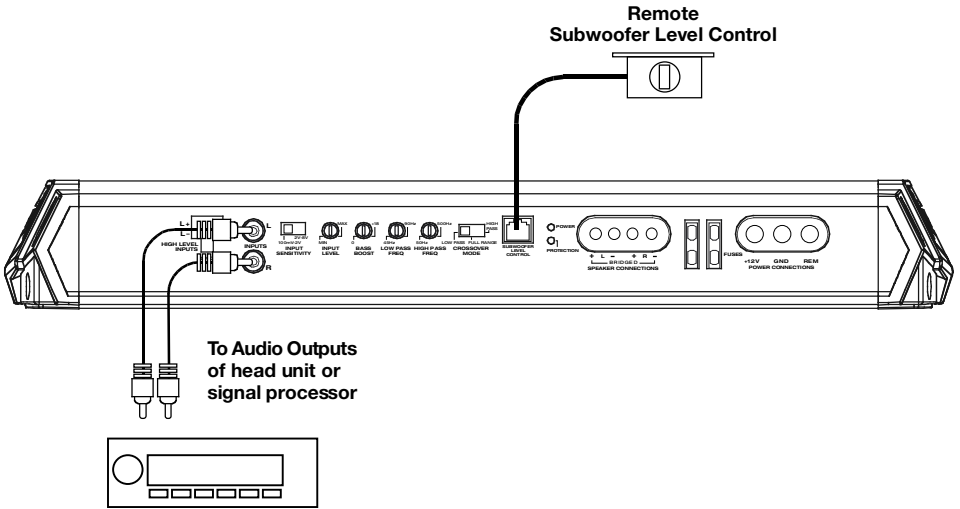

Low Level Input Wiring


NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

4-Channel Amplifiers

NX3000.4

NX2500.4

NX2000.4

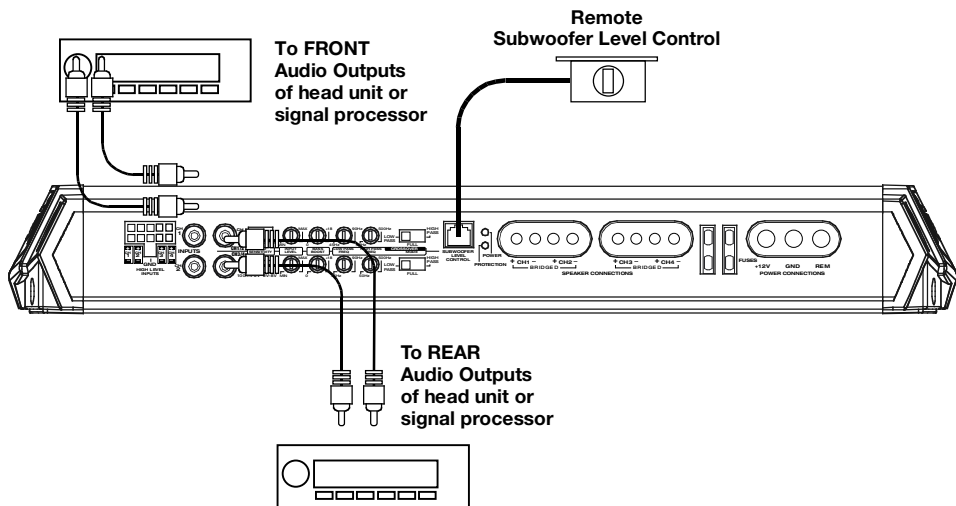

High Level Input Wiring


NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

2-Channel Amplifiers

NX3000.2

NX2000.2

NX1600.2

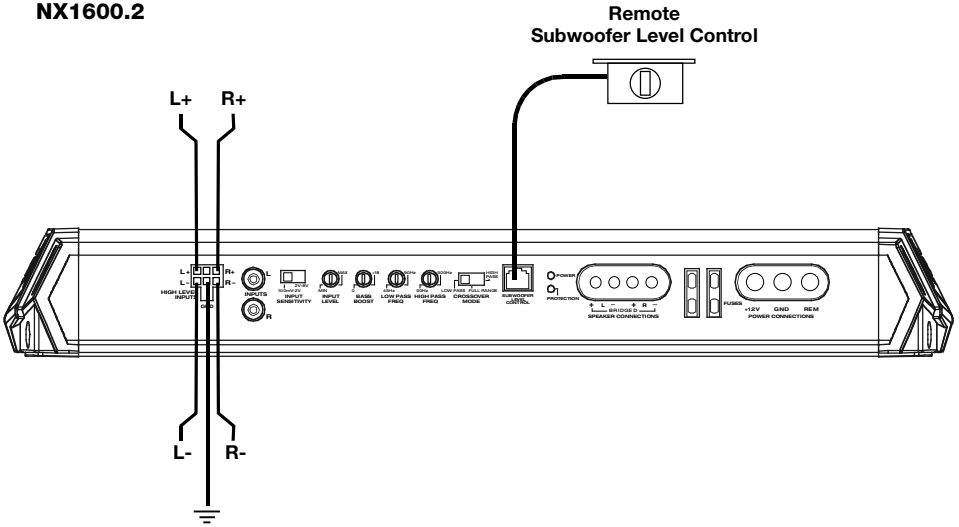



High Level Input Wiring

NOTE: Do not connect BOTH the high level and low level inputs from your receiver to your amplifier at the same time!

4-Channel Amplifiers

- NX3000.4
- NX2500.4
- NX2000.4

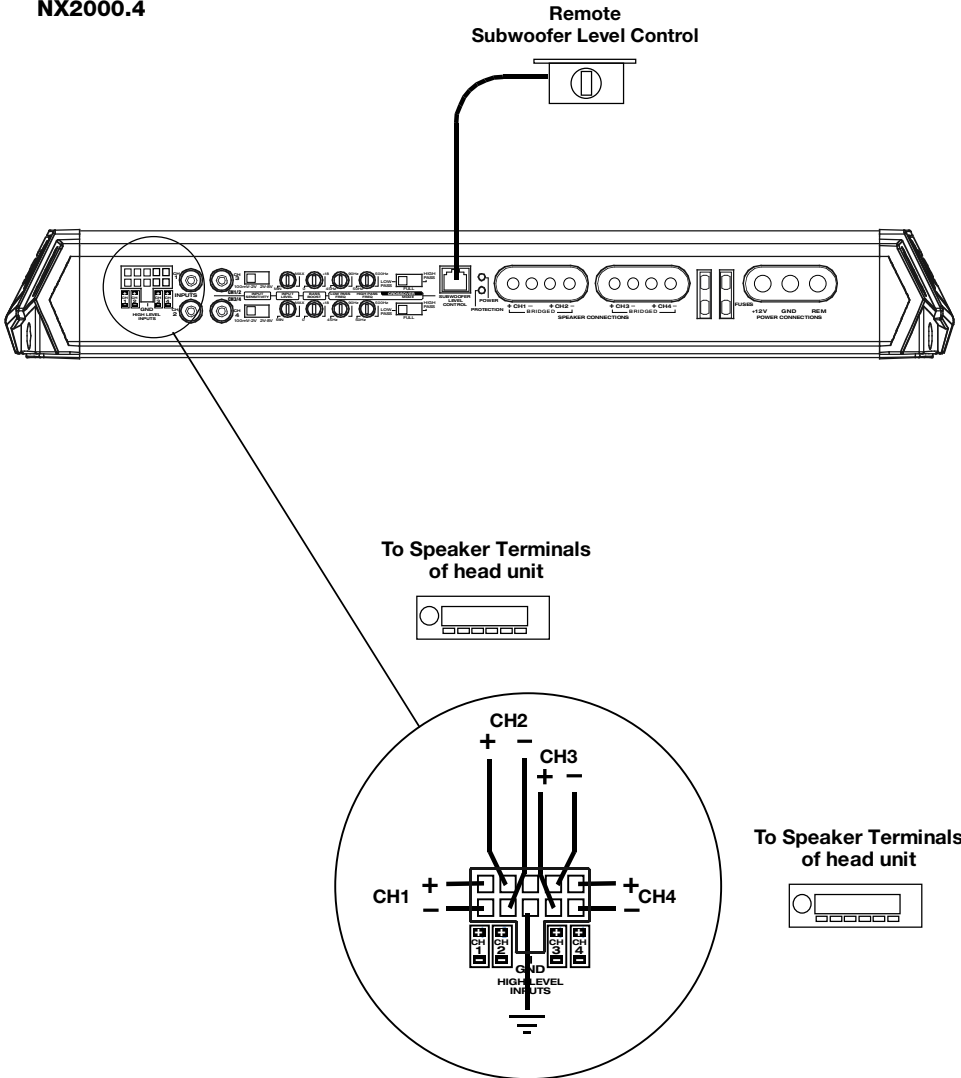

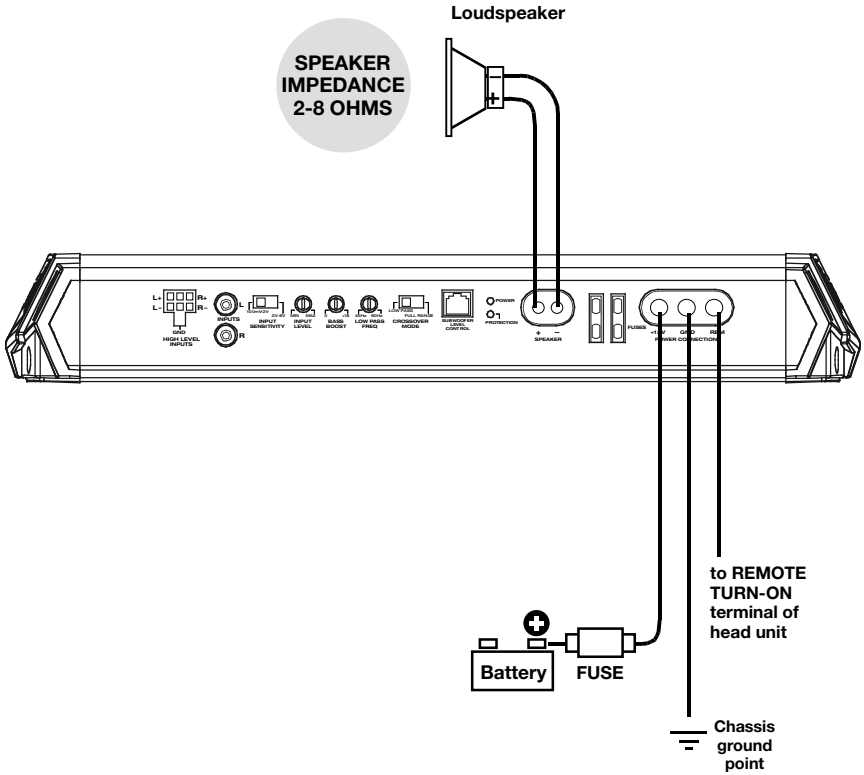


Power and Speaker Wiring

2 Channel

2-Channel Amplifiers

NX3000.2
NX2000.2
NX1600.2

Two Channel Mode

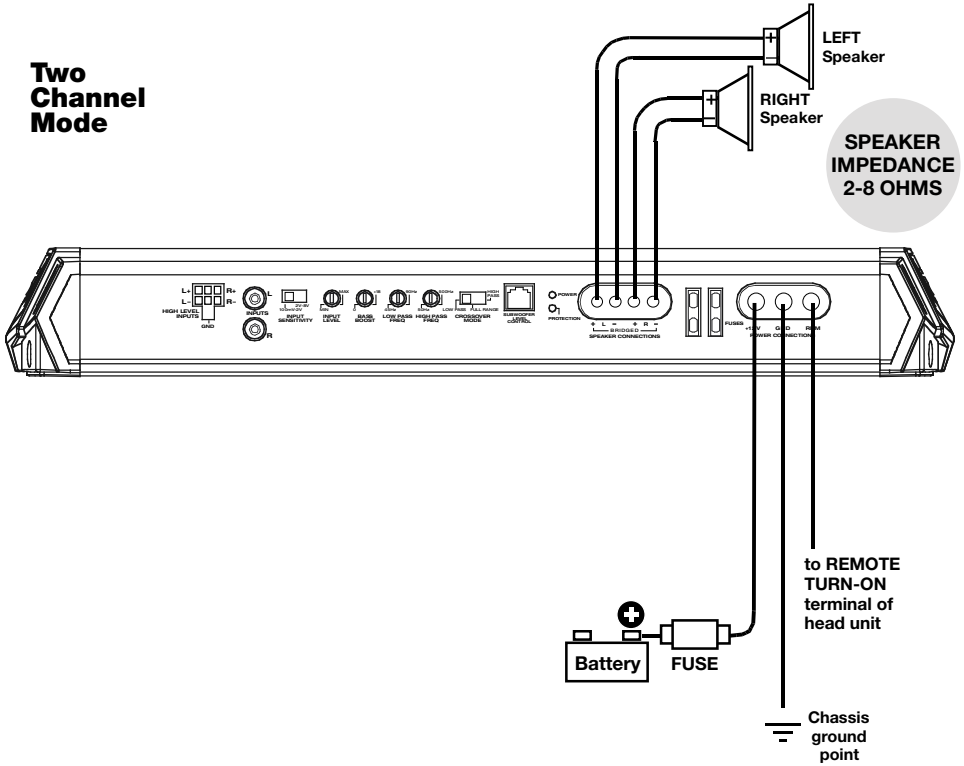

Power and Speaker Wiring

Bridged Mode


2-Channel Amplifiers

NX3000.2
NX2000.2
NX1600.2

Connect the Positive (+) terminal of the subwoofer to the L (+) amplifier terminal.

Connect the Negative (-) terminal of the subwoofer to the R (-) amplifier terminal.

Bridged Mode

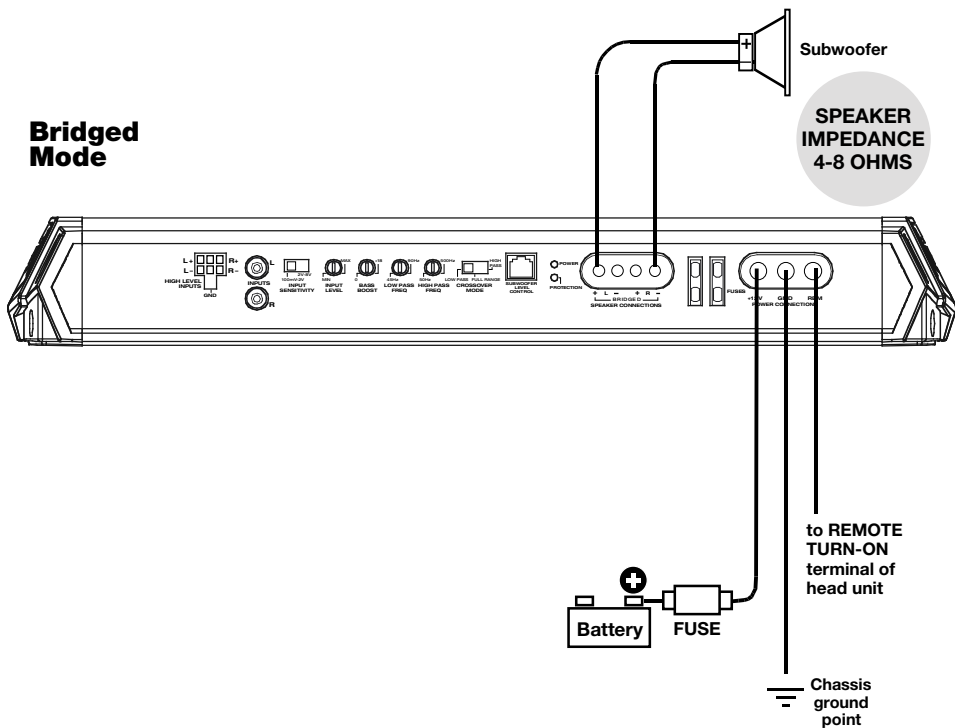

Power and Speaker Wiring

Tri-Mode

Tri-mode operation allows you to connect this amplifier to a pair of main speakers plus a subwoofer on one pair of output channels. The main speakers will operate in STEREO while the subwoofer simultaneously operates in MONO.

To set up the amplifier to run in this mode, put the crossover switches in the FULL position. Insert high pass filter capacitors and a low pass filter inductor into the wiring as shown below. Be sure to check the table at the bottom of this page to determine the correct capacitor and inductor values for the crossover frequency you wish to achieve.


2-Channel Amplifiers

NX3000.2
NX2000.2
NX1600.2

Component values for 6dB Passive Crossover

FREQUENCY	INDUCTOR	CAPACITOR
80 Hz	7.5mH	470uF
100 Hz	6.5mH	330uF
120 Hz	5.5mH	330uF
150 Hz	4mH	220uF

Tri-Mode

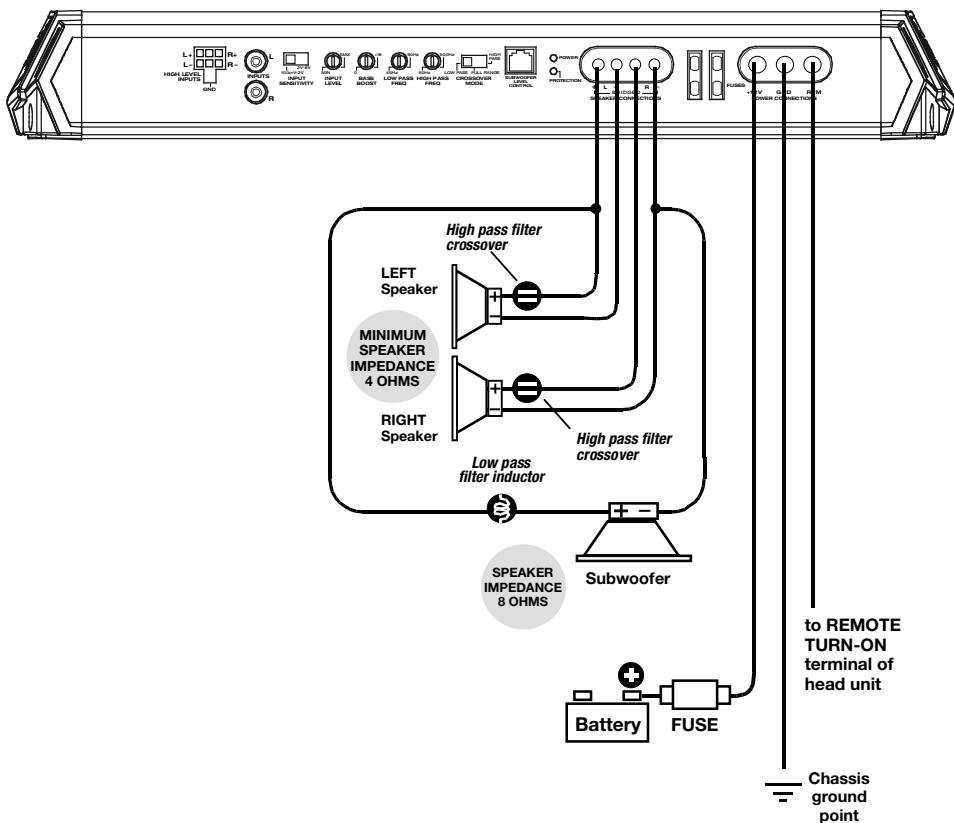

Power and Speaker Wiring

4 Channel Mode


4-Channel Amplifiers

NX3000.4

NX2500.4

NX2000.4

Four Channel Mode

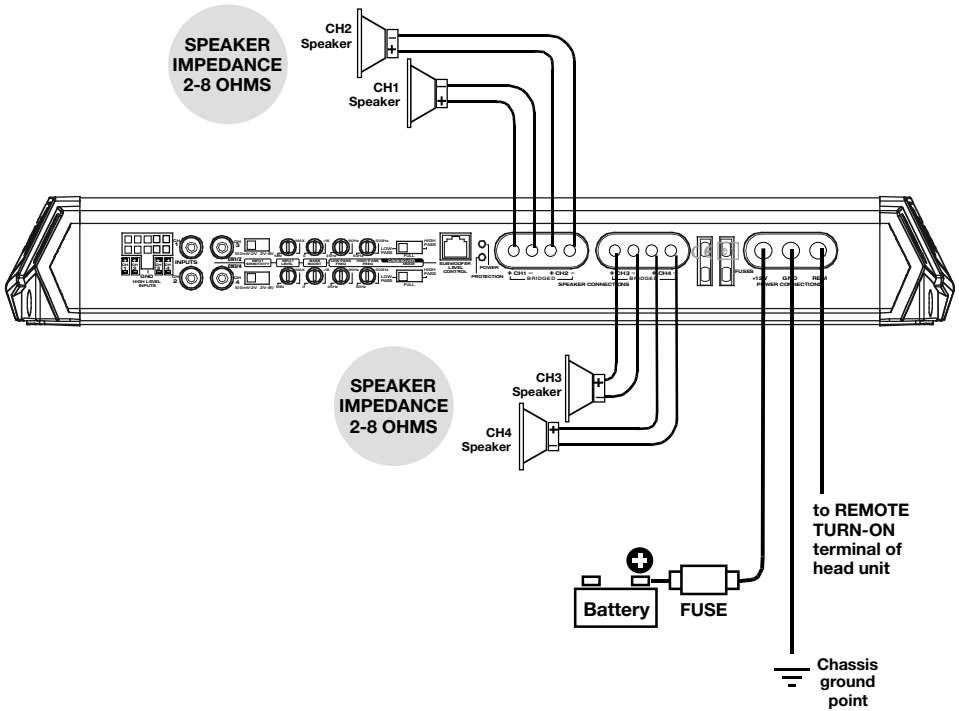

Power and Speaker Wiring

Bridged Mode


4-Channel Amplifiers

NX3000.4

NX2500.4

NX2000.4

Bridged Mode

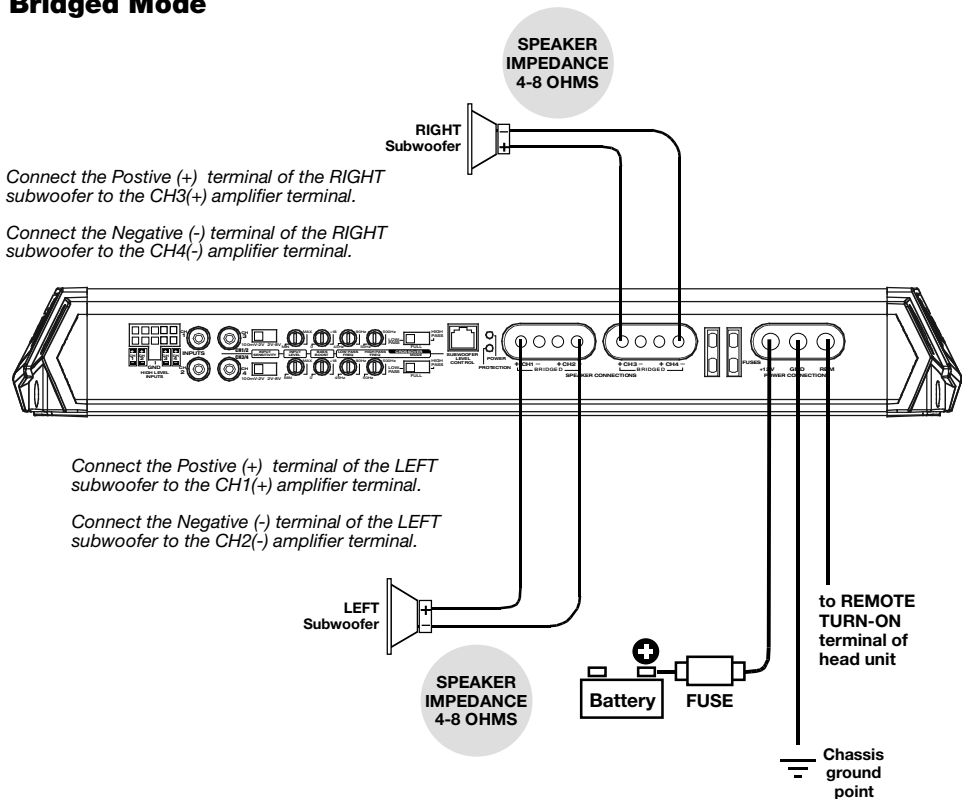

Power and Speaker Wiring

Tri-Mode

Tri-mode operation allows you to connect this amplifier to a pair of main speakers plus a subwoofer on one pair of output channels. The main speakers will operate in STEREO while the subwoofer simultaneously operates in MONO.

To set up the amplifier to run in this mode, put the crossover switches in the FULL position. Insert high pass filter capacitors and a low pass filter inductor into the wiring as shown below. Be sure to check the table at the bottom of this page to determine the correct capacitor and inductor values for the crossover frequency you wish to achieve.

4-Channel Amplifiers


NX3000.4
NX2500.4
NX2000.4

Tri-Mode

Component values for 6dB Passive Crossover

FREQUENCY INDUCTOR CAPACITOR

80 Hz	7.5mH	470uF
100 Hz	6.5mH	330uF
120 Hz	5.5mH	330uF
150 Hz	4mH	220uF

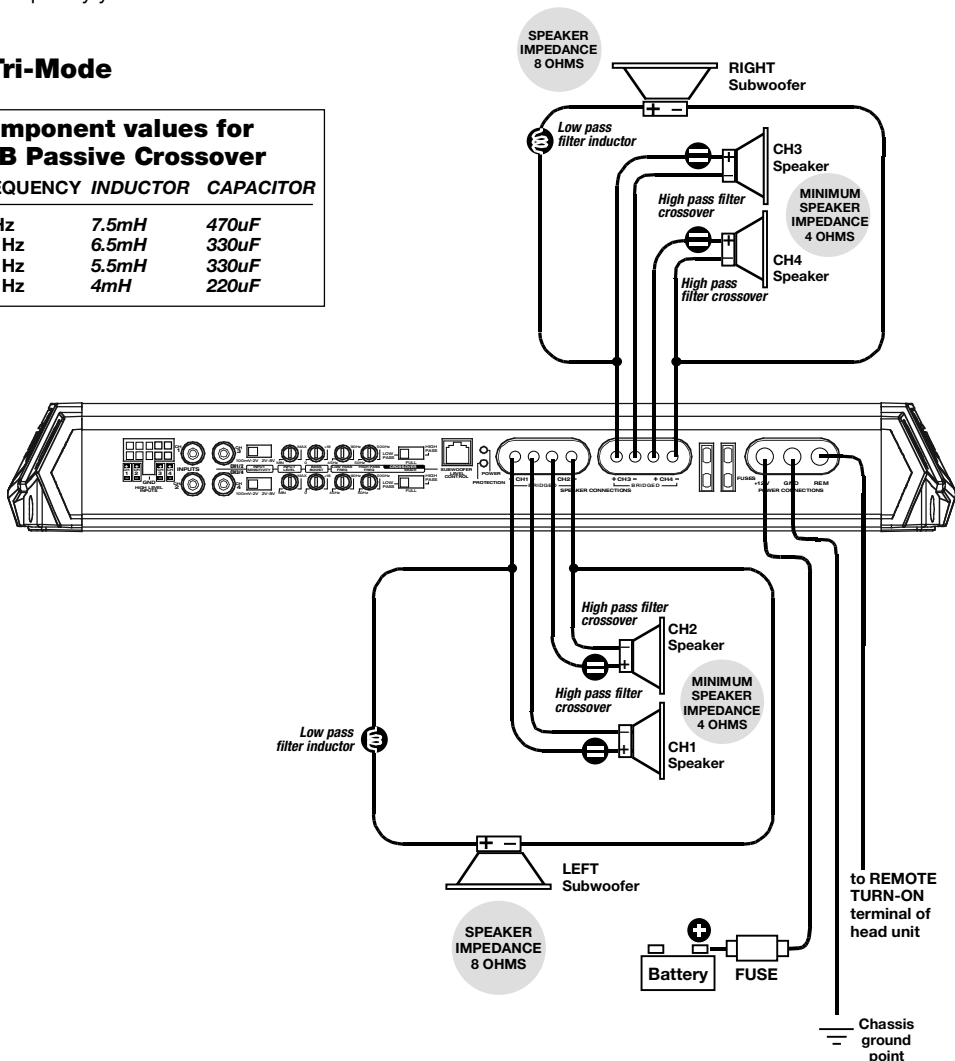

Troubleshooting

If you experience operation or performance problems with this product, compare your installation with the electrical wiring diagram on the previous pages. If problems persist, read the following troubleshooting tips which may help eliminate the problems.

SYMPTOM	POSSIBLE REMEDY
Amplifier will not power up.	<p>Check to make sure you have a good ground connection.</p> <p>Check that the Remote Input (Turn-On) has at least 3VDC.</p> <p>Check that there is battery power on the (+) terminal.</p> <p>Check that there is at least 12v.</p> <p>Check all fuses, replace if necessary.</p> <p>Make sure that the Protection LED is not illuminated. If it is lit, shut off the amplifier briefly, and then repower it.</p>
Protection LED comes on when amplifier is powered up.	<p>Check for short circuits on speaker leads.</p> <p>Turn down the volume control on the head unit to prevent overdriving.</p> <p>Remove speaker leads, and reset the amplifier. If the Protection LED still comes on, then the amplifier is faulty and needs servicing.</p>
No output.	<p>Check that all fuses are OK.</p> <p>Check that amplifier is properly grounded.</p> <p>Check that the Remote Input (Turn-On) has at least 3VDC.</p> <p>Check that the RCA audio cables are plugged into the proper inputs.</p> <p>Check all speaker wiring.</p>
Low output.	<p>Reset the Level Control.</p> <p>Check the Crossover Control settings.</p>
Audio present in only one channel.	<p>Check the RCA interconnect cables.</p> <p>Check all speaker wiring.</p>
High hiss in the speakers.	<p>Disconnect all RCA inputs to the amplifiers. If the hiss disappears, then plug in the component driving the amplifier and unplug its inputs. If the hiss disappears at this point, go on until the faulty/noisy component is found.</p> <p>It is best to set the amplifier's input level control as low as possible. The best subjective signal-to-noise ratio is achieved in this manner. Try to set the head unit as high as possible (without distortion) and the amp input level as low as possible.</p>
Squealing noise from speakers.	<p>Check for improperly grounded RCA interconnects.</p>
Distorted sound.	<p>Check that the Input Level Control is set to match the signal level of the head unit. Always try to set the Input Level as low as possible.</p> <p>Check that all crossover frequencies are properly set.</p> <p>Check for short circuits on the speaker leads.</p>
Amplifier gets very hot.	<p>Check that the minimum speaker impedance for the amp model is correct.</p> <p>Check that there is good air circulation around the amp. In some applications, it may be necessary to add external cooling fan(s).</p>
Engine noise (static type)	<p>This is usually caused by poor quality RCA cables, which can pick up radiated noise. Use only the best quality cables, and route them away from power cables.</p>
Engine noise (alternator whine)	<p>Check that speaker leads are not shorted to the vehicle chassis.</p> <p>Check that the RCA grounds are not shorted to the vehicle chassis.</p> <p>Check that the head unit is properly grounded.</p>

Specifications



MODEL	2-Channel MOSFET Amplifiers			MonoBlock MOSFET Amplifiers	
	NX1600.2	NX2000.2	NX3000.2	NX1800.1	NX2800.1
RMS POWER into 4 Ohms	400W x 2	500W x 2	700W x 2	900W x 1	1500W x 1
MAX POWER into 2 Ohms	800W X 2	1000W X 2	1500W X 2	1800W X 1	2800W X 1
BRIDGED POWER into 4 Ohms	1600W X 1	2000W x 1	3000W x 1	n/a	n/a
Min. speaker impedance	2 Ohm Stereo 4 Ohm Mono Bridged				
THD	0.01%				
Frequency response	20Hz-22kHz			15-250Hz	15-250Hz
Signal-to-noise ratio	102dB			100dB	100dB
Channel separation	90dB				
Damping factor	125+				
Crossover range low pass	30Hz-160Hz				
high pass	50Hz-1kHz			n/a	n/a
Bass boost	Variable 0 to +18dB				
Fuse rating	25A	15A x 2	30A x 2	25A	25A x 2
Dimensions: (10" x 2-3/16" x ...)	12-7/8"	15-13/16"	22"	11-3/4"	15-1/8"

MODEL	4-Channel MOSFET Amplifiers		
	NX2000.4	NX2500.4	NX3000.4
RMS POWER into 4 Ohms	200W x 4	250W x 4	300W x 4
MAX POWER into 2 Ohms	500W X 4	625W X 4	750W X 4
BRIDGED POWER into 4 Ohms	1000W X 2	1250W x 2	1500W x 2
Min. speaker impedance	2 Ohm Stereo 4 Ohm Mono Bridged		
THD	0.01%		
Frequency response	20Hz-22kHz		
Signal-to-noise ratio	102dB		
Channel separation	90dB		
Damping factor	125+		
Crossover range low pass	45Hz-90Hz		
high pass	50Hz-500Hz		
Bass boost	Variable 0 to +18dB		
Fuse rating	25A x 2	30A x 2	25A x 3
Dimensions: (10" x 2-3/16" x ...)	15-5/8"	18-5/16"	23-1/2"

All specifications subject to change without notice.

Notes

